

Setting up the data connection to mytecalemit via LAN

Connect your fuel terminal to your LAN network. Be sure to follow the operating instructions!

For operation with mytecalemit, the LAN must fulfill the following prerequisites:

- Connecting the fuel terminal to the internet must be possible without having to log in to a proxy server, as the fuel terminal does *not* support login via proxy servers.
- Port 53 for DNS queries must be enabled for the TCP/IP protocol. The fuel terminal does not perform any DNS queries via the UDP protocol.

Please carry out the following steps to set it up:

- Please sign up at mytecalemit.com.
- Now create a new company on the website (only for the first fuel terminal).
- Select the menu items Master data \rightarrow Fuel terminals.
- Select "Add fuel terminal", and then select "Create network configuration".
- Enter your network settings into the fields provided for this purpose. We urge you to use a public DNS server (9.9.9.9 for Quad9 or 8.8.8.8 for Google):

GENERATE	NETWORK	CONFIGURATION	
		CONTROLL	

Select your communication method and fill in the required fields.

Then select Download and save the configuration file on a USB flash drive. (Note: Depending on your browser-settings the required file 'network.dat' will appear in your default Downloads-Folder)

The settings can be uploaded to the fuel terminal via its system menu. The fuel terminal will appear automatically in the list of fuel terminals after its first successful connection.

Connection settings local area network (LAN)			(i) V
lp address 192.168.XXX		Subnet mask 255.255.XXX.XXX	
Gateway 192.168.XXX.XXX			
Dns server 1 8.8.8.8	i	Dns server 2 9.9.9.9	(i)
cancel			download



mytecalemit.com





• If DHCP is used on your network, you only need to enter the settings for the DNS server.

Connection settings local area network (LAN)		<u>(i)</u> v
Ip address	Subnet mask	
Gateway		
Dns server 1 8.8.8.8	Dns server 2 9.9.9.9	Ì
cancel		download

- Download the configuration file (network.dat) and copy it to a USB stick.
- Start the fuel terminal (HDA/HDM). If a configuration message prompt appears, cancel with "Exit".
- Open the system menu by entering the master code (factory setting 99999).
- Follow the following path to load the configuration:
- **HDA eco** System \rightarrow Extended \rightarrow Interface \rightarrow Read configuration **HDA 5 eco and HDA pro** System \rightarrow Interface \rightarrow Read configuration
- Then insert the USB stick when prompted by the terminal and remove it again.
- Exit the system menu.
- The terminal will now automatically connect to mytecalemit and synchronize.
- Please wait until the synchronization is complete. It may take approx. 5 minutes.

As soon as your fuel terminal appears in the list on mytecalemit.com \rightarrow Menu: Master data \rightarrow Fuel terminals, the data connection is ready for use.

								s mytecalemit Cloud 👻
Dashboard	FUEL TERMINALS							
ଳିବ Supplier <	\oplus add fuel terminal [] iii delete	d export ? import						
📋 inventory data 🛛 🗸	ye search							
Fuel terminals External fuelings	Name	Туре	Firmware	ID-Nr.	Connection type	Last connection	In sync	Input options
Venicies Drivers Fill level measuring devices	HDA 5 eco Vertrieb	HDA 5 eco (SuperBox)	531122 (HDA_V5C)	1234567	INTERNET	18/05/2020 12:00 am	yes	vehicle driver